

INSTRUCTIONS FOR CAPRI TRACK

Part No. 715599101

MONOPOINT CANOPIES CP134, CP135, CP150, CP155

IMPORTANT SAFETY INSTRUCTIONS

These Track Accessories are for use only with Capri Lighting's "CT" series track system. Care must be taken to see that Capri Track and all connections have been installed in accordance with their instruction sheets, and that the electrical system has been tested before installing fixtures.

DESCRIPTION: Ceiling canopies for installation of a single track fixture to a ceiling outlet box.

CP150: Monopoint Canopy - for use with a single line voltage (120v) fixture.

CP155: Monopoint Canopy - for use with a single line voltage (120v) fixture, constructed of steel.

CP134: Low Voltage Monopoint Canopy - for use with a single low voltage (12v) fixture without integral transformer.

CAUTION: Requires a remote transformer. For use only with CR series low voltage fixture.

CP140: HID Canopy - for use with metal halide track heads only.

CP135: Power Pack Adapting Canopy - for use with a single CP12 solid state transformer which is used only with CR series low voltage fixture. May also be used without CP12 transformer for use with a single line voltage fixture (CT or CV series). Square shaped canopy (not shown).

Assembly

Important: Disconnect power at panel before installation.

1. Ceiling outlet box should be installed flush with ceiling.
2. Screw circular bar strap to outlet box with round head screws provided.
3. Connect the ground wire and lead wires from the Monopoint Canopy and strap to the corresponding wires in the outlet box. Wires should pass through the center holes of the strap.
4. Push all slack wires up into the outlet box and place center portion of Monopoint Canopy through center hole of strap.
5. Secure Monopoint Canopy to circular bar strap with countersunk screws provided.

NOTE:

When installing or using Capri Track system, basic safety precautions should always be followed. Read all instructions.

WARNING: RISK OF ELECTRICAL SHOCK OR FIRE:

NEVER

- install track to any vertical surface (e.g. walls, vertical beams, columns, door frames).
Fixtures may not remain secure, electrical components may be exposed, and hot fixtures may come in contact with persons or combustibles.

NEVER


- install track in wet or damp locations;
- install any part of the track system less than 5 feet above the floor;
- install any fixture assembly closer than 6 inches from any curtain or similar combustible material; or
- attempt to connect power tools, extension cords, appliances or the like to the track.

ALWAYS

- disconnect electrical power before adding to or changing the configuration of the track.

WARNING: RISK OF FIRE. FAILURE TO TIGHTEN ALL CONNECTIONS ON TRACK POWER SUPPLIES, TRACK CONNECTORS, PENDANT KITS, CANOPIES, AND ANY OTHER ELECTRICAL TRACK COMPONENT MAY RESULT IN EXCESSIVE TEMPERATURE AT THE CONNECTIONS CAUSING SPARKS AND/OR FIRE.

SAVE THESE INSTRUCTIONS

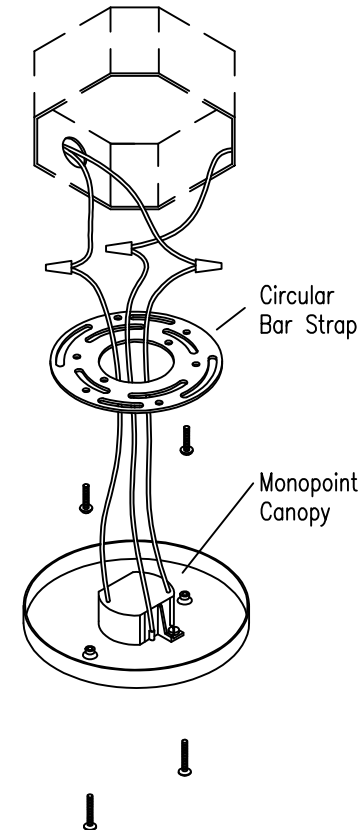

capri
L I G H T I N G

Capri Lighting
776 South Green Street
Tupelo, MS 38804
662-842-7212
662-841-5501 fax

Canadian Division
189 Bullock Drive
Markham, Ontario L3P 1W4
905-294-9570
905-294-9811 fax